




The Preserver™

Skimmer Installation Instructions


1) Confirm contents.

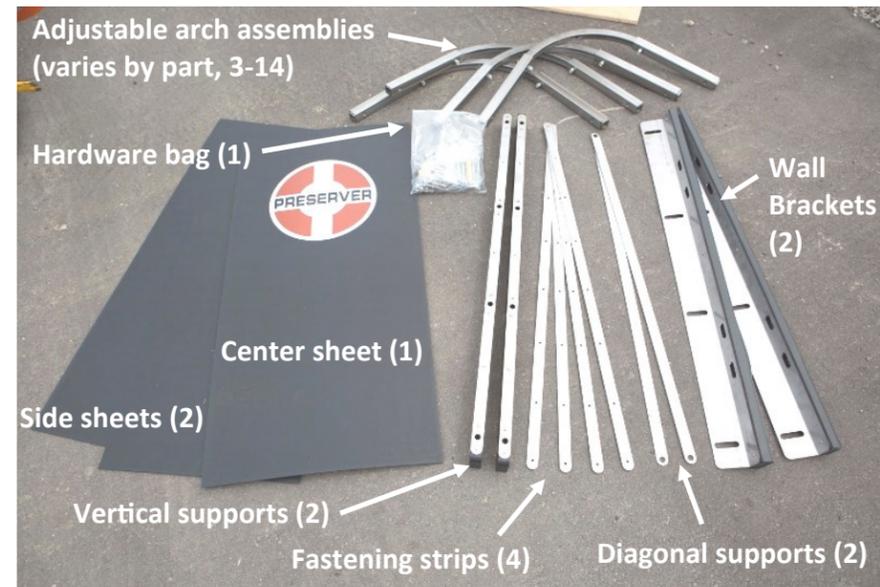

2) Gather required tools.



3) Locate outlet pipe.

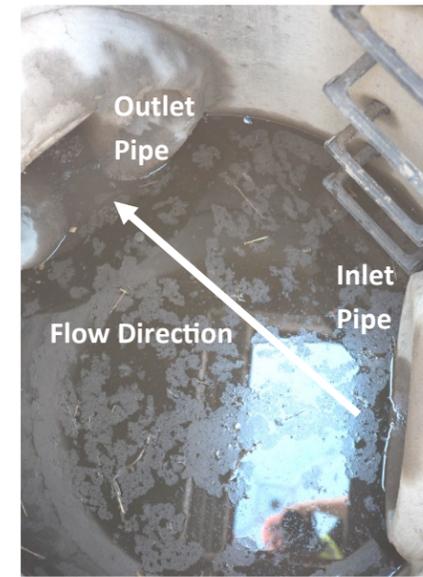

4) Hold arch assembly horizontally at center of outlet, applying inward pressure toward the pipe. Adjust arch assembly to avoid obstructions and allow room for installation.



Note:
Keep inner-most arch holes available for vertical supports (Step 13).



5) Mark wall at outside edges of arch assembly. Remove arch assembly and adjust all remaining arch assemblies to match.



6) Make horizontal marks at center of outlet pipe, crossing bracket marks from previous step.



7) Measure and mark the center of the wall bracket on the back (pipe side) edge.



8) Align wall bracket with marks made in Steps 5, 6 and 7. Use level to ensure bracket is vertical prior to next step.

Pat. US 9,752,600 B2
Pat. CA 2,893,173

Questions? Call 877-773-0073
Installer is responsible for meeting all safety and confined space entry requirements.

PROUDLY MADE IN THE USA
QUALITY MATERIALS:
• 100% recycled HDPE
• Stainless steel brackets
• Stainless steel hardware




The Preserver™

www.ThePreserver.com

Skimmer Installation Instructions

Page 2/2


9) Install one anchor bolt per pair of slots. See additional anchor bolt instructions in hardware bag. Repeat Steps 7 through 9 to attach other wall bracket.

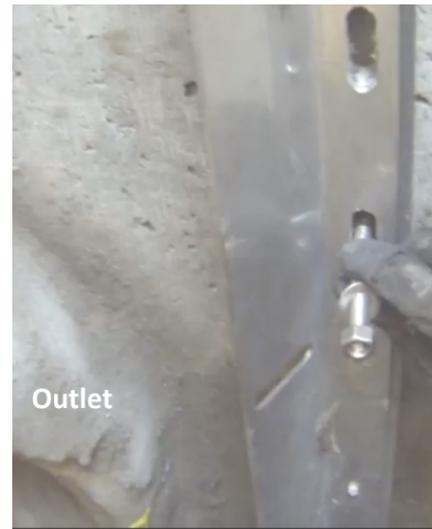

10) Working from the bottom up and leaving nuts and bolts loose, attach arches to wall brackets. Go to next step prior to attaching top arch.



11) While installing top arch, attach diagonal supports between arch and wall brackets.

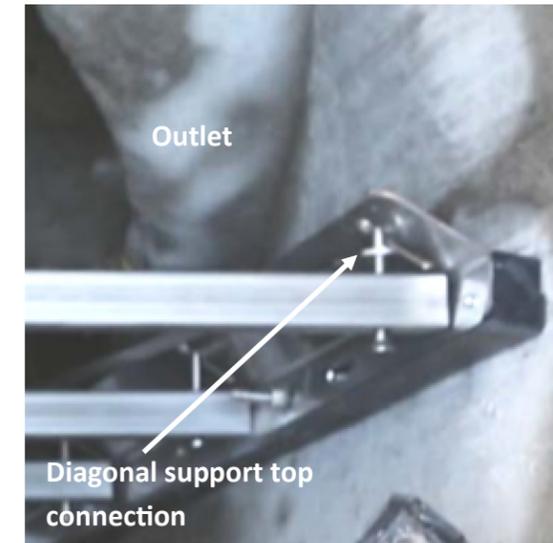

12) Remove nut from lower arch adjusting bolts (each side). Attach bottom of diagonal support at this location, on each side.



13) Attach vertical supports. Tighten all nuts and bolts on skimmer structure, working from center of skimmer towards the walls.



14) Attach both side sheets at wall using (2) fastening strips and provided screws. Use hand clamps for assistance. Apply pressure and adjust your drill's torque setting to prevent stripping.



15) Clamp center sheet to center of skimmer structure, overlapping side sheets as shown above. Attach center sheet to vertical supports using (2) remaining fastening strips and provided screws.



Pat. US 9,752,600 B2

Pat. CA 2,893,173

Questions? Call 877-773-0073

Installer is responsible for meeting all safety and confined space entry requirements.

PROUDLY MADE IN THE USA

QUALITY MATERIALS:

- 100% recycled HDPE
- Stainless steel brackets
- Stainless steel hardware